


DELUXE MASSAGE CHAIR

Damico Sento

Please read the user manual carefully before use.

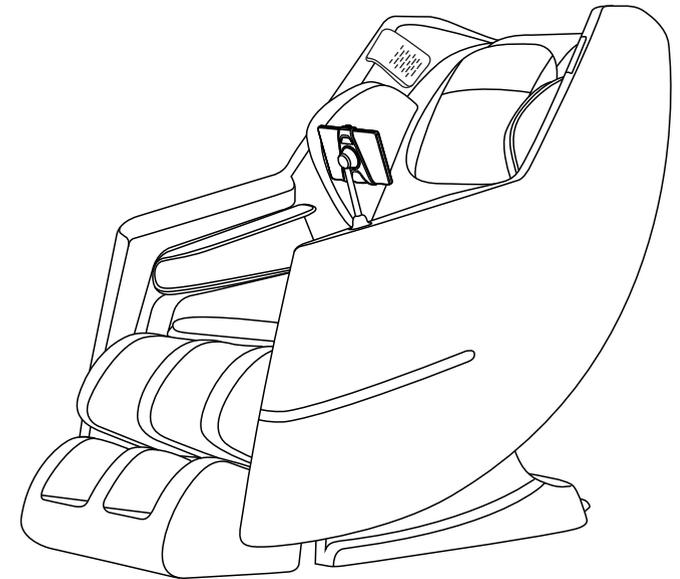

Thank you for choosing our product and your support. Please read user manual carefully. After reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice.

Contents

Safety	1-6
Components	7-13
Outer Structure	7 ¹²
Controller	8
Controller Intruction	9-10
Bluetooth Pairing	10
Shortcut Buttons	11
Automatic Massage Mode	12
Control Display	13
Voice Control	14-15
Preparation Before Use	16-18
Move the Chair	16
Place the Chair	16
Install Backrest Pad and Pillow Pad	17
Installation of manual bracket	17
Remote Controller Connection	18
Connect power	18
Troubleshoot	19
Cleaning and Maintenance	20
Specifications	21

Safety

IMPORTANT SAFETY INSTRUCTIONS

This massage chair is intended for household use only .When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

DANGER

-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

Safety

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 19) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 20) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operatable.
- 21) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 22) If it is not in use for a long time or after use, please turn off the power and pull out the power plug.
- 23) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.

Safety

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

IMPORTANT SAFETY INSTRUCTIONS

● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

Safety

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
It is not recommended to use the massage for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

● People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical implanted in your body.

Safety

● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

● Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.


Safety

● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 100-240V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

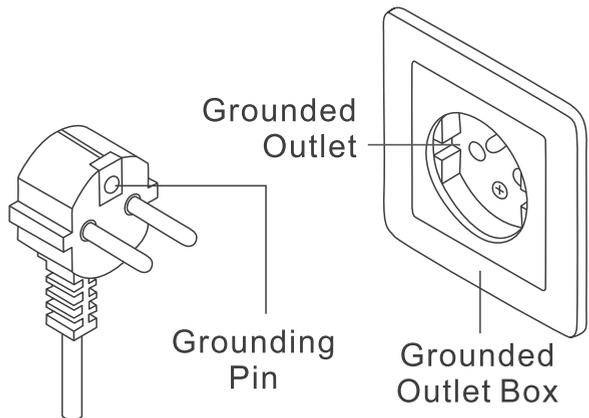

Components


Outer Structure

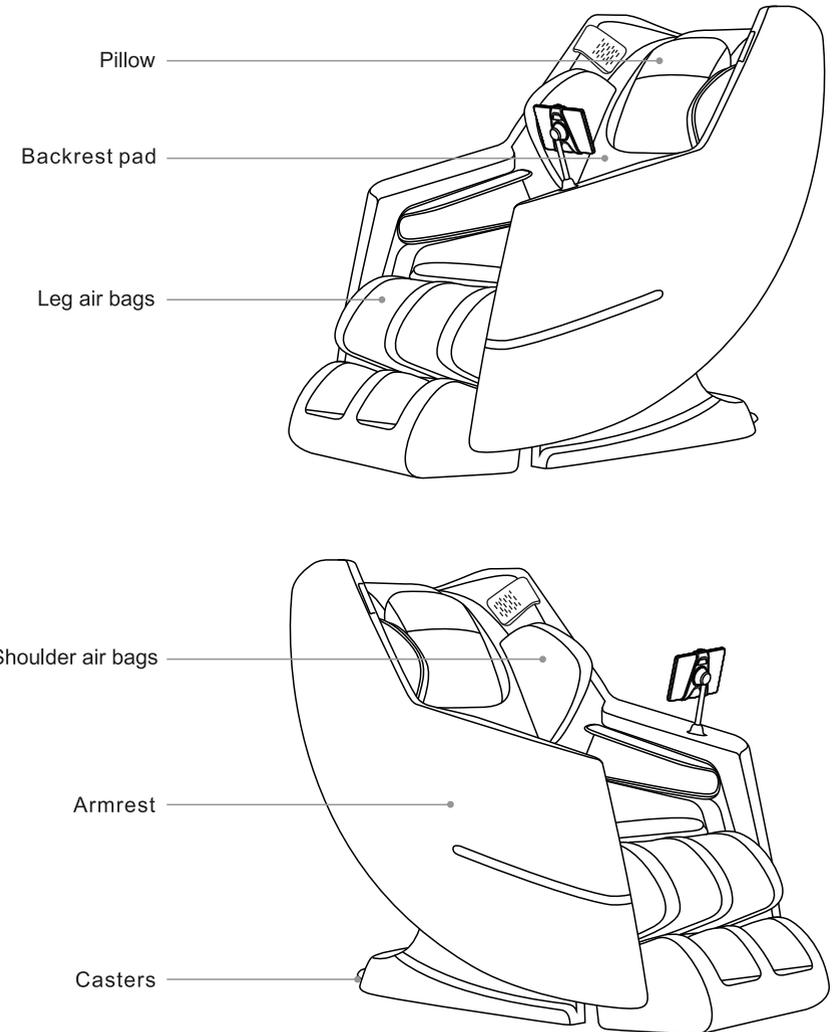

Components

Controller

(The specific display is subject to the actual product.)

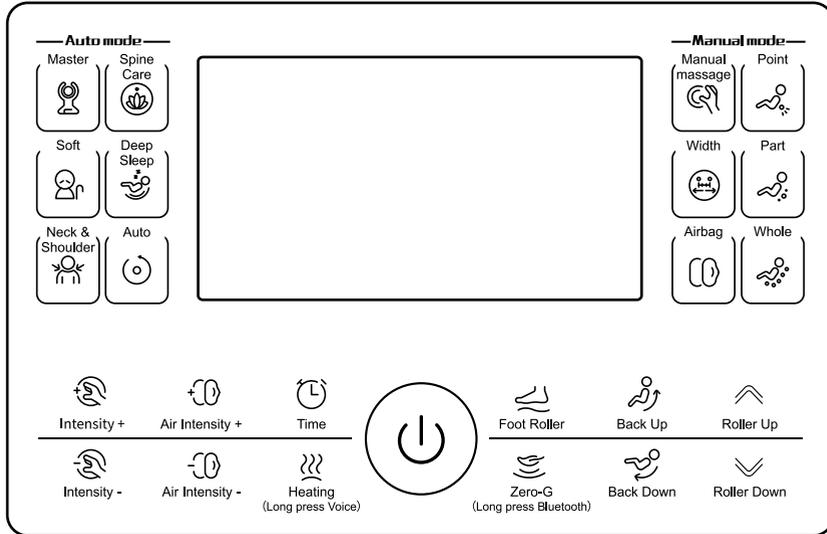

⚠ Caution

- Do not sit, step or place heavy objects on the controller.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.

Components

Controller Instruction

FUNCTION	ICON	DESCRIPTION
Power		Long press the to turn on/off the massage chair, short press to stop/resume the massage function.
Master		Press the button to running the Master mode.
Spine Care		Press the button to running the Spine Care mode.
Soft		Press the button to running the Soft mode.
Deep Sleep		Press the button to running the Deep Sleep mode.
Neck & Shoulder		Press the button to running the Neck & Shoulder mode.
Auto		Press this button to switch between multiple auto modes. Select an auto mode for targeted massage according to your body situation.
Manual massage		Press this button to switch to manual massage. You can choose different massage methods according to your body situation.
Point		For fixed-point massage, press " ^ " or " v " to adjust the massage position.
Part		For the selected part of the back and forth massage, press " ^ " or " v " to adjust the massage position.
Whole		Massage back and forth in the Whole process.
Width		Press this button to adjust the width of the massage movement under Knocking/Tapping/Shiatsu. The screen shows: " ㄟ " widest, " ㄟ " medium, " ㄟ " narrow.
Intensity +		Press this button to increase the massage intensity.
Intensity -		Press this button to decrease the massage intensity.
Airbag		Press this button to turn on / turn off airbag massage function / switch airbag position
Air Intensity +		Press this button to increase the massage air intensity.
Air Intensity -		Press this button to decrease the massage air intensity.

Components

FUNCTION	ICON	DESCRIPTION
Time		Press this button to set the massage time. The selected time is 10/15/20/25/30mine.
Heating (Long press Voice)		Short press this button to turn on/off the Heating function. Long press this button to turn on/off the Voice function.
Foot Roller		Press to turn on/off the function and adjust the strength from level 1 to level 3.
Zero-G (Long press Bluetooth)		Short press this button to turn off or switch the zero gravity of stage 1-3. Long press this button to turn on/off the bluetooth function.
Back Up		Long press this button to raise the backrest and lower the leg rest. Release it to lock the current angle.
Back Down		Long press this button to lower the backrest and raise the leg rest. Release it to lock the current angle.
Roller Up		In auto mode, when shoulder position is detected, press this button to further adjust shoulder position up / down.
Roller Down		In the manual mode, long press this button to adjust the position of the mechanism up / down.


Bluetooth Pairing

From your phone or other Bluetooth-capable device, search for devices, locate “Damico Sento” and pair.



Components

Shortcut Buttons

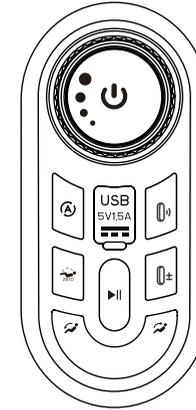

FUNCTION	ICON	DESCRIPTION
Power		Press this button to activate or deactivate the massage chair.
Rotation		Rotate clockwise to increase stage, and counterclockwise to decrease stages. The stage are divided into 1-6 stage.
Auto		Press this button to switch between multiple automatic program functions. The specific display is subject to the actual. product.
Pause		Press this button to pause all massage functions. Press again to resume the massage.
Airbag		Press this button to turn on/turn off airbag massage function / switch airbag position.
Intensity		Press this button to adjust the airbag intensity from levels 1 to 3.
Zero-G		Press repeatedly this button to activate one of the three zerogravity modes.
Back Up		Long press this button to raise the backrest and lower the leg rest. Release it to lock the current angle.
Back Down		Long press this button to lower the backrest and raise the leg rest. Release it to lock the current angle.
USB	USB	You can remove the protective cover (tab) to recharge your phone using a USB cable (not provided).

Components


Automatic Massage Mode

Master	Master mode, full body massage, and the intensity of roller and airbag massage are strong.
Spine Care	Widely use acupressure and scraping techniques, focusing on both sides of the spine massage to improve body microcirculation.
Soft	Suitable for the elderly and children, full body massage, roller and airbag massage in the lightest way to improve back pain and leg cramp for the elderly.
Deep Sleep	Full body massage, push rod up/down, slow swing function, light intensity for rollers.
Neck & Shoulder	The partial massage focuses on improving neck pain and shoulder muscle strain, and the roller is focusing more on neck and shoulder massage.
Slim	Focused on waist and hip massage, soft intensity.
Refreshing	Medium intensity rollers on the back combines with full body airbag squeeze to relax and wake up your body in the morning or after noon break.
Relaxing	Relaxing mode, full body massage, medium intensity for roller and airbag massage.
Spa	Full airbag massage and foot roller massage.
Sport Care	Full body massage, a program designed specifically for athletes and fitness person.
Deep Stretch	Full body massage to better relieve muscle soreness after sport or hard work.
Waist & Back	Partial massage, focus on waist and back, help to relieve muscle soreness of back and waist.

Components

Control Display

(The specific display is subject to the actual product.)

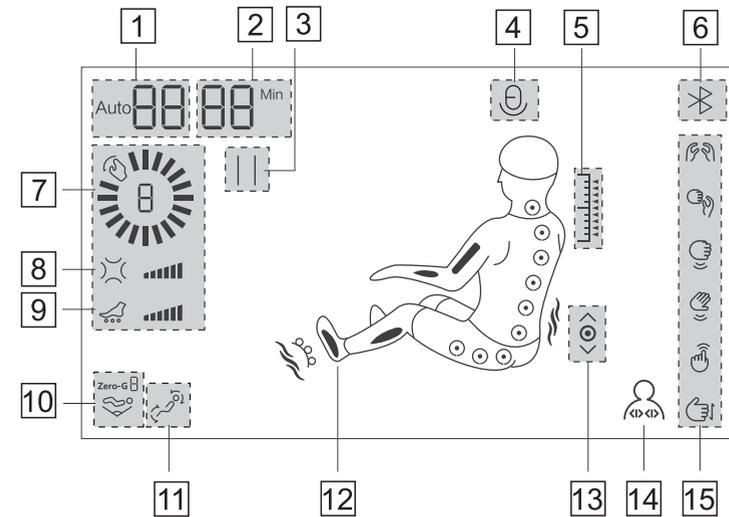

- 1** Auto/Manual Program Display Area **2** Time **3** Pause
- 4** Voice Broadcasting **5** Auto Body Scanning: The corresponding area flashes.
- 6** Bluetooth Speaker **7** Back Roller Speed **8** Airbag Intensity
- 9** Foot Roller Speed **10** Zero gravity display area:
- 11** Backrest Up/Down:
- 12** Heating: Light up when in use Airbag massage: The corresponding area flashes
Foot Roller: Light up when in use Back Roller: The corresponding area flashes.
- 13** Back Roller Display Area: Full Body Spot Local
- 14** Massage Width: Wide Medium Narrow
- 15** Massage Techniques: From top to bottom: Kneading-Clapping-Knocking-Tapping-Shiatsu-Rolling. The selected technique flashes when used.

Voice Control (English only)

When the massage chair is turned on or in standby mode, say "Hello massage chair" to enable the voice control function.

Use the following commands to use the AI voice Control feature:

Command Words	Response by Chair
Hello massage chair	Hello
Power on	Please select your favorite program to start your massage.
Power off	During shutdown, please leave or restart the massage chair after the chair is completely reset. Thank you and hope you enjoy the massage.
Pause massage	Massage paused
Continue to massage	Massage resumed
Turn on heating	OK, Heating on
Turn off Heating	OK, Heating off
Turn on Bluetooth	OK, Bluetooth on
Turn off Bluetooth	OK, Bluetooth off
Massage for ten minutes	OK, Massage for ten minutes
Massage for fifteen minutes	OK, Massage for fifteen minutes
Massage for twenty minutes	OK, Massage for twenty minutes
Massage for twenty five minutes	OK, Massage for twenty five minutes
Massage for thirty minutes	OK, Massage for thirty minutes
Zero gravity	OK, Zero gravity
Turn on foot roller	OK, Foot roller on
Turn off foot roller	OK, Foot roller off
Start airbag massage	OK, Start airbag massage
Stop airbag massage	OK, Stop airbag massage


Voice Control (English only)

Stop airbag massage	OK, Stop airbag massage
Increase air intensity	Air intensity up
Decrease air intensity	Air intensity down
Increase strength	Increase back roller intensity
Decrease strength	Decrease back roller intensity
spot massage	OK, spot massage
local massage	OK, local massage
whole body massage	OK, whole body massage
Kneading massage	OK, kneading massage
Tapping massage	OK, tapping massage
Shiatsu massage	OK, shiatsu massage
Knocking massage	OK, knocking massage
Clapping massage	OK, clapping massage
Rolling massage	OK, rolling massage
Master massage	Master massage
Spine Care massage	Spine Care massage
Soft massage	Soft massage
Deep Sleep massage	Deep Sleep massage
Neck and shoulder massage	Neck and shoulder massage
Slim massage	Slim massage
Refreshing massage	Refreshing massage
Relaxing massage	Relaxing massage
Spa massage	Spa massage
Sport Care massage	Sport Care massage
Deep Stretch massage	Deep Stretch massage
Waist & Back massage	Waist & Back massage

Preparation Before Use


Move the Chair

- Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

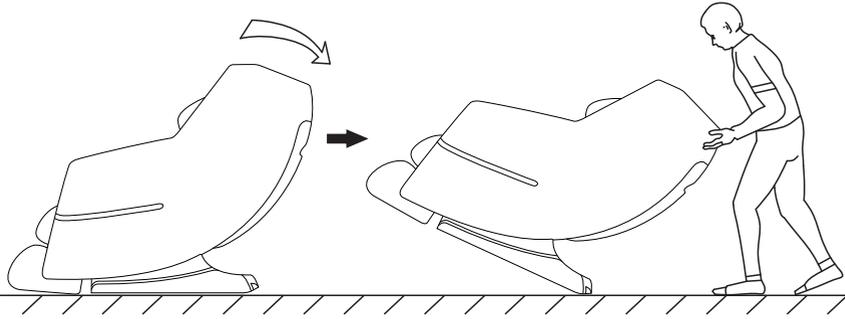

Place the Chair


Please make sure that there is an allowance of more than 25cm behind the massage chair, and more than 40cm in front of the massage chair to allow the backrest to recline without obstruction during operation.

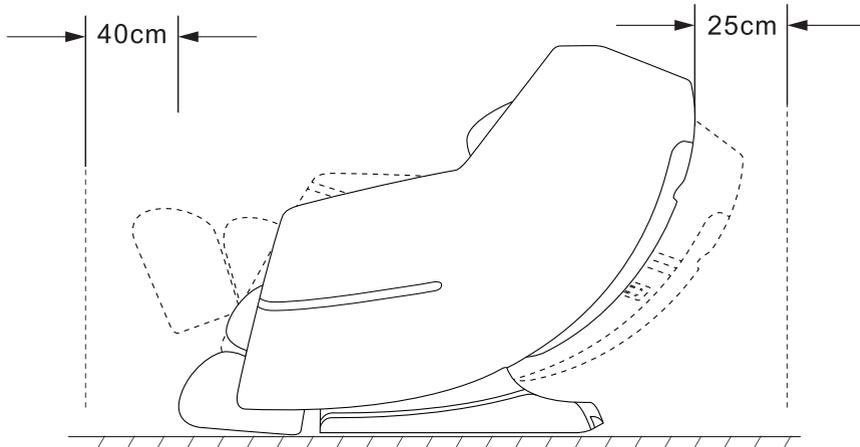


Preparation Before Use

Install Backrest Pad and Pillow Pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with zipper.

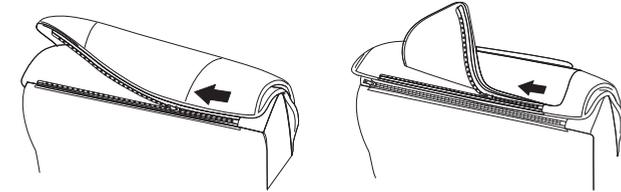


- Attach the left side of backrest pad to backrest with zipper, same as the other side.

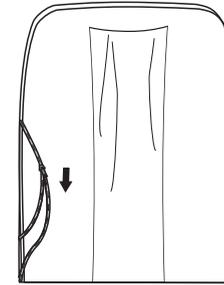

Installation of manual bracket


1. Align stand and pole.
2. Screw nut to secure it.

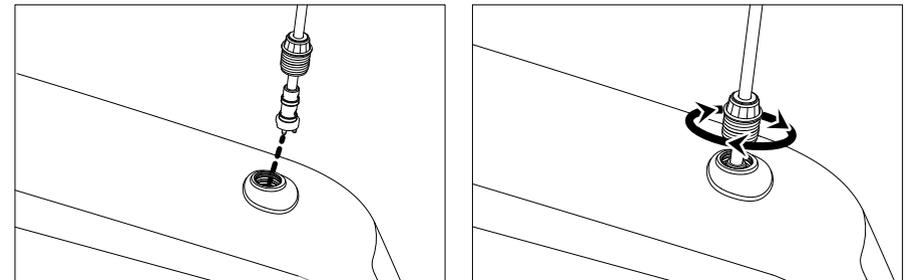

Preparation Before Use


Remote Controller Connection

- Connect the cable of remote controller with the cable under seat.

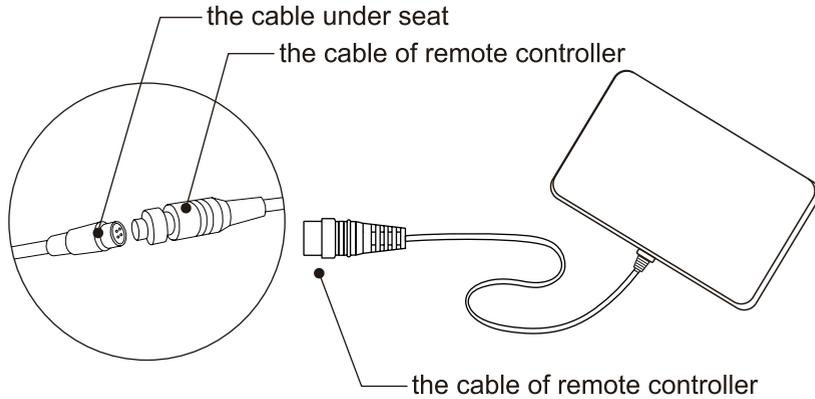

Connect power

- Plug the power cord into power inlet, turn on the power switch.

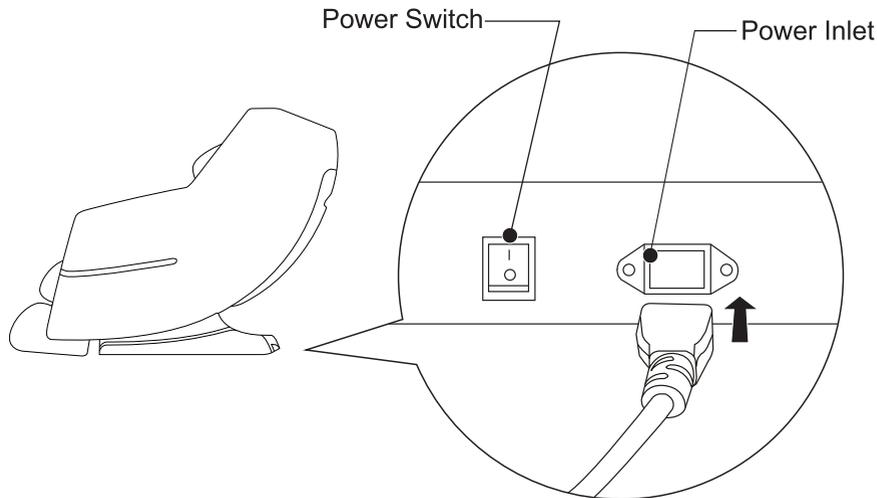

Troubleshooting Guide

If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or customer service center.

Problem	Possible cause/action	
The massage rollers move up and then stop.	<ul style="list-style-type: none"> • Massage program has ended. the automatic timer function will move the massage roller to the upper end when the massage is over . 	Normal operation, not abnormal
Noise during the massage	<ul style="list-style-type: none"> • The sound of clapping; • Friction sound of the massage wheel and fabric during kneading; • The sound of the massage wheel when lifting and kneading; • The sound during air pressure massage; • The sound of the inflator pump; • The sound of airbag exhausting; • The sound of the backrest up and down. 	
The massage rollers stop during the massage.	<ul style="list-style-type: none"> • If the force applied to the massage rollers is too large, the massage rollers will stop running. • Lift your body slightly when using it, or raise the backrest slightly. (especially if weight of more than 100kg, is applied.) 	After checking, if there is still an abnormality, please stop using the massage chair immediately.
Press the power button, but the massage chair doesn't work properly or cannot connect to the power.	<ul style="list-style-type: none"> • Please check the following: <ol style="list-style-type: none"> 1. Is the power plug fully inserted into the socket? 2. Is the main power switch on the left rear of the unit turned on? 	
The power cord and plug are abnormally hot.	<ul style="list-style-type: none"> • Please stop using immediately. 	
		Please contact with your dealer or customer service.
		Do not disassemble or repair it yourself or by non-professionals.

Cleaning and Maintenance

Maintenance advice

Please follow the below steps to clean leather and plastic parts

- Please ensure the main switch is turn off and the power plug is unplugged from the electrical outlet.
- Dip a soft, dry cloth in water or warm water containing 3% to 5% neutral detergent and wring it thoroughly.
- Clean the leather and plastic parts.
- Then wipe with dry soft cloth.
- Let it dry naturally.

Warning

- Do not use alcohol, thinner, gasoline and other chemicals for cleaning.
- Do not dry the surface with a blower.
- Do not iron the fabric.
- During maintenance, always unplug the power plug. Do not unplug it by wet hands.
- Please use a dust cover to avoid dust if you won't use the chair for a long time.
- As fabric's color may be dyed on the leather, be careful when using denim and colored cloth to wipe the product.
- Wipe the product with the melamine foam dipped in mild detergent, if the dirt is hard to remove.
- Do not let the leather touch plastic in case of the color fading.
- Water temperature should not exceed 40 degrees.



Please do not use



Water temperature should not exceed 40 degrees



Do not iron

Specifications

Model Number	Damico Sento
Rated Voltage	100-240V~
Rated Frequency	50-60Hz
Rated Power	120W
Upright position - Approximately	1470(L)x750(W)x1100(H)mm
Reclined position - Approximately	1701(L)x750(W)x906(H)mm

